



SmartyUDCsw - Remote Tuning Guide

1 Customer

1.1 Customer requirements



A Smarty device with the latest software revision installed.



SmartyUDCsw installed on a PC.



A main license dongle for the SmartyUDCsw with a VIN# license free or associated to the truck to be tuned.



In case of more vehicles, the VIN# license dongle, free or associated to the truck to be tuned, is needed.

See also:
["SmartyUDCsw - Quick Guide"](#),
["SmartyUDCsw - Application Guide"](#).

2 Tuner

2.1 Tuner requirements



SmartyUDCsw installed on a PC.



A main license dongle for the SmartyUDCsw with a VIN# license free or associated to the truck to be tuned.



In case of more vehicles, the VIN# license dongle, free or associated to the truck to be tuned, is needed.

See also:
["SmartyUDCsw - Quick Guide"](#),
["SmartyUDCsw - Application Guide"](#).



SmartyUDCsw - Remote Tuning Guide

1.2 Customer stock file send instructions

- Associate or VIN# lock the Smarty to the vehicle.
[See: "5 Associate or VIN# lock the Smarty to the vehicle" in the "SmartyUDC - Quick Guide".](#)
- Connect the Smarty to the PC.
- Insert the main license dongle. If the main dongle contains a VIN# license for another vehicle, insert also a free VIN# license dongle for that vehicle.
- Run the SmartyUDCsw.
- Create a new .smarty document with the stock for your vehicle from the Smarty. Use the "File > Read from stock Smarty" command, by default the application will automatically save the file in the appropriate folder
...\\My Documents\\SmartyUDCsw\\..., the format of the file name is <the last 9 digits of the VIN#>_<progressive number>.smarty.
[See: "8.2.1.1 Read stock from Smarty \(CTRL+N\)" in the "SmartyUDCsw - Application Guide".](#)
- Send the .smarty file to your Tuner via email or USB device.
- The Tuner can now start writing your custom tune. Just wait to receive the .smarty document prepared by the Tuner.

2.2 Tuner stock file receive instructions

- Copy the .smarty file you received from the customer to the appropriate folder in
...\\Documents\\SmartyUDCsw\\...
- Insert the main license dongle, if the VIN# license has already been used, insert a free VIN# license dongle.
- Run the SmartyUDCsw.
- If you did not already, now compile the user data from the menu Tools > User data..., these are the only information's that will be displayed from a .smarty protected document.
- Open the .smarty document (stock file) you received from the customer. The first time you open the file you will be asked to use a free VIN# license.
- Perform the tuning with the SmartyUDCsw.
- Enter a comment for the customer in the "User File Notes", this information will be displayed by the .smarty protected document.
- Save the changes to the .smarty document.



SmartyUDCsw - Remote Tuning Guide

1.3 Customer tuned file receive instructions

- Copy the .smarty file received from the Tuner to the appropriate folder in ... \Documents\SmartyUDCsw\....
- Connect the Smarty to the PC.
- Insert the main license dongle, if that contains a VIN# license for another vehicle, insert the VIN# license dongle for the vehicle which had been used to read the stock file from the vehicle.
- Start the SmartyUDCsw.
- In the SmartyUDCsw open the .smarty document (tuned file) you received from the Tuner.
- With SmartyUDCsw write the tuned file into the Smarty.
- Disconnect the Smarty from the PC and connect it to the vehicle.
- With the Smarty now write the tuned file into the ECM.

See also:
["SmartyUDCsw – Quick Guide"](#),
["SmartyUDCsw – Application Guide"](#).

2.3 Tuner, tuned file send instructions

- Export the tuned file as a .smarty **protected** document. A protected file can not be opened / viewed / copied but only written into a Smarty with the matching VIN#.
- Send the .smarty protected document to the Customer.

See also:
["SmartyUDCsw – Quick Guide"](#),
["SmartyUDCsw – Application Guide"](#).